
Cineped / Rotational Slider Set Up



2 Mounting a slider on Quatro



- a. Hold the Slider by placing the hands at 'Hold here' sign.
- b. Place the Slider on Quatro into the key-way.
- c. Tighten the knob to secure the Slider.
- d. Slide the sliding platform to both ends and check the bubble level. If the bubble is not level, adjust 2 legs.
- 3 Mounting a fluid head

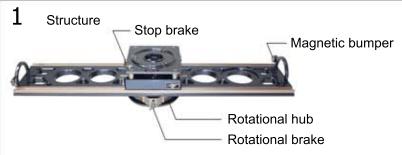

- a. Before mounting the fluid head, check that all 4 legs are well balanced.
- b. Slide the sliding platform to one end of the Slider and mount a fluid head.

4 Mounting a camera



 Once the fluid head is mounted, bring back the sliding platform into the middle and then mount the camera

Safety

- Do not hold sliding platform but hold at 'Hold here' sign.
- Camera on the rotational slider must stay with in the range of the legs, otherwise it will tip over.



- · Safety level of leg positions with the slider
 - 0 degree Dangerous
 - 15 " Dangerous
 - 30 " Minimum safety
 - 60 " Very safe
 - 45 " Safe
 - 75 " Very safe
 - 90 " Very safe

Dis-assemble

- a. Remove the camera from the middle position and then slide the platform to the side to dismount the fluid head.
 - b. After dismounting the fluid head, bring the sliding platform to the middle and loosen the bottom knob.
- 2 a. Hold the Slider at 'Hold here' sign and put it in the carrying case.
 - b. Stop brake and rotational brake should be applied in the middle position before the slider goes into the carrying case.

Maintenance

 Clean the inside of the sliding rail with a fine cloth and lubricant oil after every use.
 (Recommended: Sprayon Lubricant S00711)

For further questions please call (310) 533-6900

www.cineped.com

1	
	1
2	Safety
b. Align the locking teeth perfectly before attempting to tighten the 4 round knobs	 Tighten the 4 round knobs and 4 clamps as tight as possible Make sure that 4 legs are standing rigid on the surface
4	For further questions please call (310) 533-6900 www.cineped.com